


VIGOUR

Pure Lebenskraft im Bad

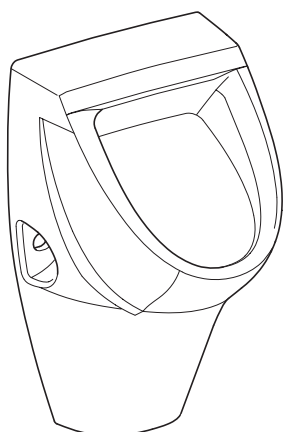

CLU


MONTAGE

Mounting
Instructions
Montage
Montering
Montaż
Montáž
Szerelés
Montaje
монтажу
Montaggio
Montáž


de Technische Änderungen vorbehalten
en Subject to technical alteration
fr Sous réserve de modifications techniques
nl Technische wijzigingen voorbehouden
no Med forbehold om tekniske endringer
pl Zmiany techniczne zastrzeżone
cs Technické změny vyhrazeny
hu Műszaki módosítások joga fenntartva
es Reservado el derecho de modificaciones técnicas
ru Возможны технические изменения
it Con riserva di apportare modifiche tecniche
sk Technické zmeny vyhradené

Montageanleitung
clivia Urinal


1

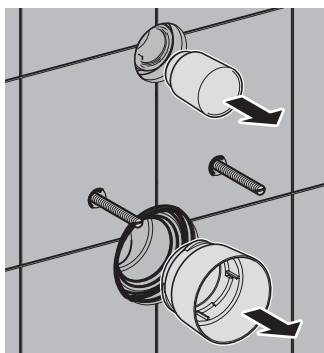


2

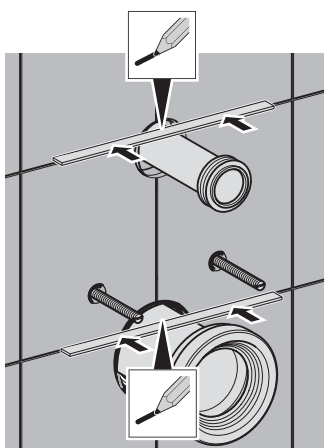


3

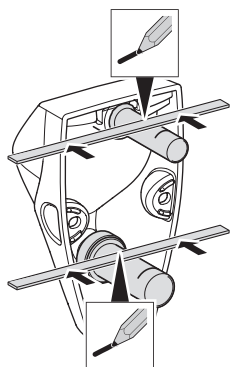


4

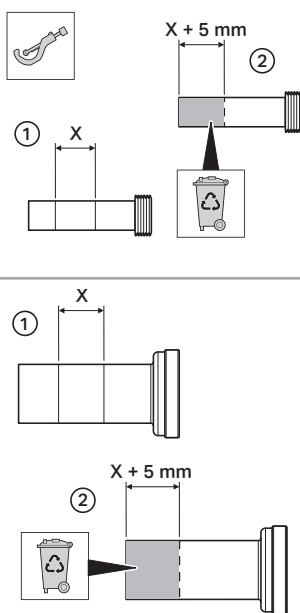


5

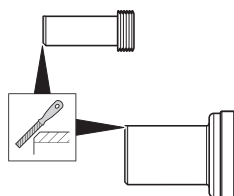


6

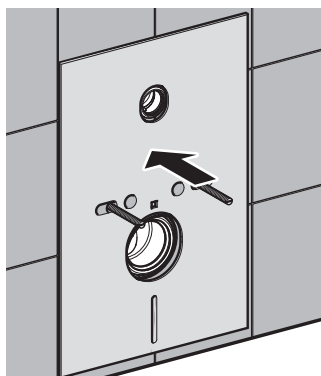


7

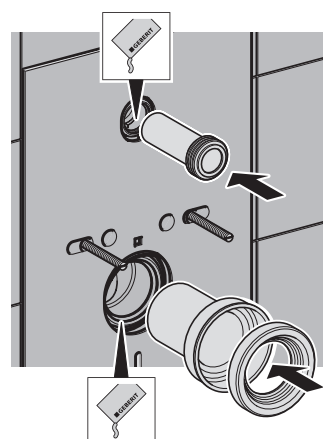

8

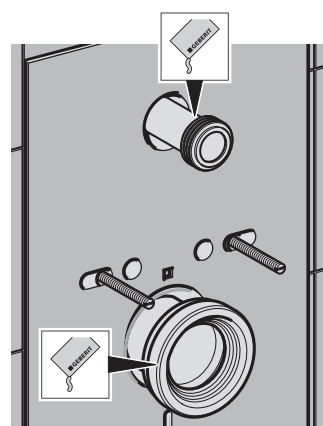


9

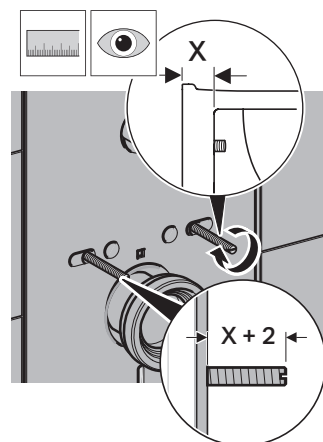

10



11

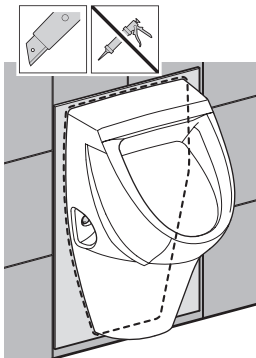

12

